

## 8 Scatter tables

**Delicia**  
**Schneckenlinsen**  
**Delicia Slug lentils**  
**Lentilles anti-**  
**limaces**



Rotations [ $\text{min}^{-1}$ ] (working width)	Slide valve position										
	7	8	9	10	11	12	13	14	15	16	17
700 (~15m/-45)	0,08	0,13	0,23	0,33	0,56	0,79					
1000 (~18m/-25)			0,23	0,37	0,57	0,80	1,12	1,56			
1500 (~24m/0)					0,60	0,90	1,28	1,40	2,32	3,00	
2000 (~30m/+45)						1,51	1,89	2,42	3,12	3,76	4,41
kg/min											

**Mesurol**  
**Schneckenkorn**  
**Mesurol Slug pellets**  
**Mesurol grains anti-**  
**limaces**




Rotations [ $\text{min}^{-1}$ ] (working width)	Slide valve position										
	9	10	11	12	13	14	15	16	17	18	19
700 (~12m/-45)	0,39	0,61	0,87	1,21	1,58	1,98	2,58	3,01			
1000 (~18m/-25)			0,92	1,26	1,64	2,09	2,61	3,15	3,67	4,35	
1500 (~21m/0)				1,38	1,70	2,25	2,79	3,43	4,11	4,82	
2000 (~28m/+45)	0,57	0,52	1,17	1,56	2,08	2,67	3,35	4,07	4,81	5,68	6,50
kg/min											

**Metarex INOV**  
**Metarex INO**  
**Metrarex TDS**  
**Metarex Slug pellets**  
**Metarex grains anti-**  
**limaces**



Rotations [ $\text{min}^{-1}$ ] (working width)	Slide valve position										
	9	10	11	12	13	14	15	16	17	18	19
700 (~10m/-45)	0,31	0,52	0,73	1,05	1,43	1,92	2,24	2,81			
1000 (~16m/-25)			0,80	1,11	1,47	1,85	2,36	2,81	3,36	3,92	
1500 (~21m/0)				1,13	1,49	1,91	2,52	3,10	3,69	4,32	5,06
2000 (~30m/+45)				1,64	2,14	2,74	3,46	3,89	4,52	5,27	5,86
kg/min											


20		
	Quality for Professionals	

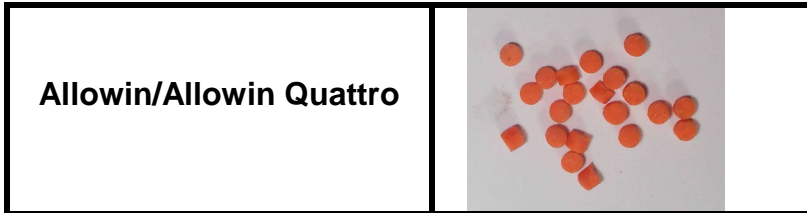

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	9	10	11	12	13	14	15	16	17	18	19
700 (~10m/-45)	0,33	0,52	0,76	1,05	1,37	1,75	2,28	2,76			
1000 (~16m/-25)			0,82	1,14	1,47	1,88	2,38	2,89	3,43	3,95	
1500 (~21m/0)				1,22	1,66	2,05	2,54	3,14	3,81	4,46	5,20
2000 (~30m/+45)				1,80	2,29	2,67	3,26	3,88	4,72	5,44	6,43
	kg/min										



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	9	10	11	12	13	14	15	16	17	18	19
700 (~10m/-45)	0,43	0,69	1,01	1,29	1,61	2,21	2,59	3,27			
1000 (~16m/-25)			1,04	1,39	1,73	2,34	2,72	3,32	4,01	4,63	
1500 (~21m/0)				1,48	1,88	2,43	2,98	3,56	4,27	4,88	5,78
2000 (~30m/+45)				1,81	2,3	2,74	3,43	4,13	4,82	5,27	5,55
	kg/min										

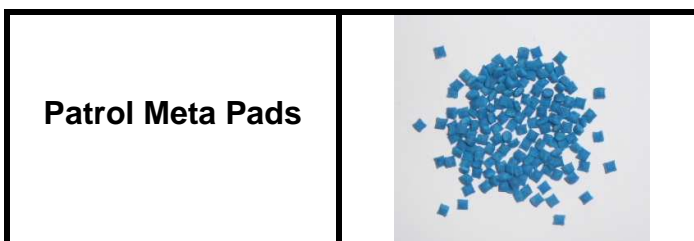

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	10	11	12	13	14	15	16	17	18	19	20
700 (~12m/-45)	0,27	0,46	0,67	0,94	1,30	1,77	2,24				
1000 (~15m/-25)		0,50	0,72	1,01	1,37	1,88	2,35	2,91	3,45	4,03	
1500 (~21m/0)		0,55	0,86	1,19	1,62	2,10	2,71	3,27	3,90	4,51	5,17
2000 (~28m/+45)		0,79	1,11	1,57	2,12	2,66	3,30	3,99	4,58	5,35	6,04
	kg/min										

**Raps**  
**Rape**  
**Colza**



Brassica Napus

Drehzahl [min <sup>-1</sup> ] (Arbeitsbreite)	Slide valve position										
	5	6	7	8	9	10	11	12	13	14	15
150 (~2,5m)	0,02	0,06	0,13	0,24	0,40						
200 (~3m)	0,02	0,06	0,14	0,25	0,40	0,62					
330 (~5m)		0,06	0,13	0,25	0,38	0,59	0,82				
380 (~6m)		0,07	0,12	0,24	0,40	0,60	0,84				
670 (~9m)			0,16	0,25	0,43	0,62	0,86	1,14			

kg/min

Auftreffpunkt: mittel

**Senf**  
**Mustard**  
**Moutarde**



Sinapis Alba

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position									
	8	10	12	14	16	18	20	22		
300 (~4m)	0,30	0,71	1,30	2,07	3,08	4,14				
600 (~8m)		0,77	1,38	2,18	3,15	4,27	5,57			
900 (~10m)			1,39	2,24	3,19	4,41	5,62	6,91		
1200 (~12m)			1,86	2,87	3,92	5,21	6,47	7,17		

kg/min

Auftreffpunkt: mittel

**Phazelia**  
**Phacelia**  
**Phacélie**



Phacelia tanacetifolia

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	9	10	11	12	13	14	15	16	17	18	20
180 (~2,5m)		0,31		0,62		1,05		1,83			
230 (~3m)	0,21	0,31	0,44	0,60	0,89	1,20					
560 (~5m)		0,33	0,46	0,71	0,92	1,23	1,67				
780 (~6m)			0,53	0,79	0,96	1,23	1,72	2,14			
1100 (~9m)					1,16	1,55	1,92	2,40	2,80	3,38	

kg/min

Auftreffpunkt: mittel

**Gras**  
**Grass**  
**Herbe**



Lolium perenne

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position									
	20	22	24	26	28	30	32			
400 (~4m)	1,14	1,58	2,06	2,41	2,89	2,89				
1000 (~7m)	1,47	1,89	2,44	2,68	3,09	3,20				
1800 (~9m)		2,54	2,98	3,41	3,68	3,97				
	kg/min									
Auftreffpunkt:	mittel									

**Rotklee**  
**Red Clover**  
**Trèfle Rouge**



Trifolium

Rotations [min <sup>-1</sup> ] (working width)	Slide valve position									
	8	9	10	11	12	13	14	15	16	17
200 (~2,5m)	0,63	0,90	1,23	1,64	2,08	2,63				
230 (~3m)		0,90	1,21	1,63	2,05	2,60	3,12			
450 (~5m)			1,27	1,86	2,26	2,64	3,31	4,00		
580 (~6m)				1,64	2,14	2,64	3,24	4,02	4,78	
850 (~9m)					2,14	2,66	3,30	3,94	4,79	5,41
	kg/min									
Contact point adjustment::	mittel									

**Weißklee**  
**White Clover**  
**Trèfle Blanc**  
**Trifolium repens**



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	7	8	9	10	11	12	13	14	15	16	17
200 (~2,5m)	0,52	0,78	1,13	1,43	1,90	2,52					
230 (~3m)			1,10	1,43	1,94	2,87	3,07	3,64			
450 (~5m)				1,47	1,96	2,55	3,13	3,89	4,65		
580 (~6m)					2,14	2,69	3,21	3,85	4,68	5,61	
850 (~9m)						2,66	3,23	3,93	4,72	5,53	6,57
	kg/min										
Contact point adjustment::	mittel										

**Luzerne**  
**Alfalfa**  
**Luzerne**

Medicago Sativa



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	7	8	9	10	11	12	13	14	15	16	17
100 (~1,5m)	0,24	0,32	0,65	1,04	1,56	1,76					
240 (~3m)		0,48	0,74	1,06	1,38	1,84	2,33				
460 (~5m)				1,15	1,62	2,04	2,48	3,06	3,72		
520 (~6m)						1,97	2,45	3,06	3,82	4,57	5,25
900 (~9m)							2,65	3,11	3,80	4,53	5,29
	kg/min										
Contact point adjustment::	mittel										

24

Quality for Professionals

**Buchweizen**  
**Buckwheat**  
**Blé Noir**

Fagopyrum



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	12	14	16	18	20	22	24				
170 (~2,5m)		0,76	1,48	1,99	2,79	3,47	4,32				
220 (~3m)	0,45	0,84	1,40	2,22	2,94	3,70					
400 (~5m)		0,97	1,61	2,25	3,13	3,98	4,59				
kg/min											
Contact point adjustment::	mittel										

**Rettich**  
**Radish**  
**Radis**

Raphanus raphanistrum



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position										
	11	12	13	14	15	16	17	18	19	20	21
240 (~2,5m)	0,77	1,05	1,37	1,73	2,19						
300 (~3m)	0,75	1,02	1,38	1,70	2,07	2,65					
470 (~5m)		1,03	1,37	1,73	2,11	2,58	3,04				
550 (~6m)			1,32	1,69	2,06	2,65	3,06	3,39			
750 (~9m)							3,06	3,32	4,10	4,46	4,83
kg/min											
Contact point adjustment::	mittel										

**Schwefellinsen  
Sulphur (lentil type)  
Soufre (fomre de  
lentillee)**



Rotations [min <sup>-1</sup> ] (working width)	Slide valve position
	<b>30</b>
1700 (~21m/0)	14,48
2000 (~25m/+45)	14,95



**NOTE:** The values specified in the setting chart are only to be taken as a guide, as not every seed type has the same flow characteristics. It is therefore only possible to perform precise adjustment of the device by means of a seed rate calibration test. The slider only opens when the spreading disc is running!